



SFS 2D-C HINGE ADJUSTMENT



To adjust the SFS 2D-C dynamic hinge, follow these steps:

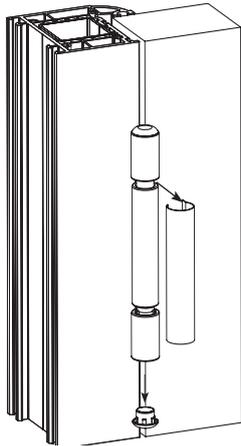

Remove the lower cap and the cover cap.

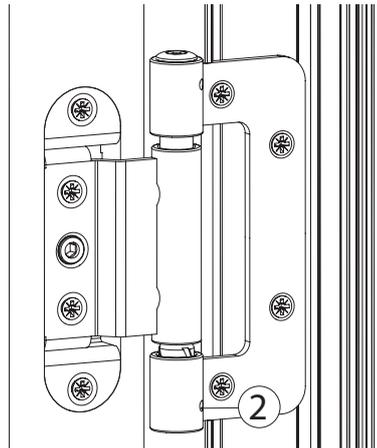

Open the door and unscrew but do not fully remove the lower security screw marked 2.

Horizontal Adjustment:

To Increase the air gap



- Loosen screws D
- Turning screw C with a 4mm Allen key
- Tighten screws D

Height Adjustment:


- Loosen the screws marked C & D
- Turn the pin with a 4mm Allen Key
- Adjustment -2mm/+6mm
- Insert caps and cover as shown

To reduce the air gap

- Turn screw C
- Tighten screws D

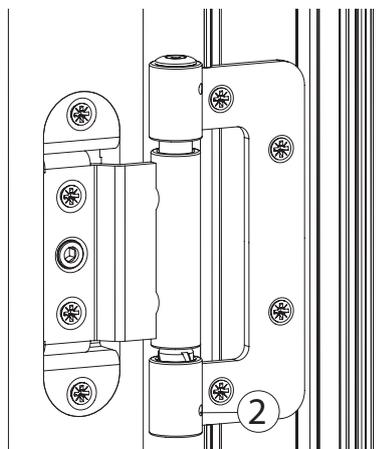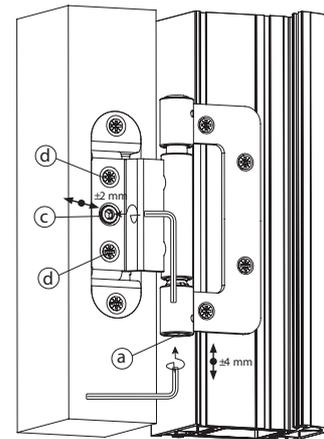

Open the door and tighten the lower security screw marked 2.

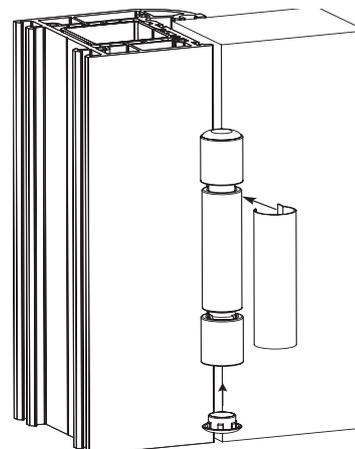

Replace the lower cap and the cover cap

Alternatively you can follow these steps in our video guide.

